



# Getting to Know Your 2015 Verano



Review this Quick Reference Guide for an overview of some important features in your Buick Verano. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.












 





## Instrument Panel

Power Door Lock Buttons    Power Mirrors Control    Turn Signal Lever/ Driver Information Center Controls    Driver Information Center    Windshield Wipers Lever



Exterior Lamp Control    Instrument Panel Illumination Control    Hood Release Lever    Cruise Control/ Forward Collision Alert\* Buttons    Tilt/Telescopic Steering Wheel Lever    Audio Steering Wheel Controls

### Symbols

	Check Engine		Security		Antilock Brake System Warning
	Oil Pressure		Charging System		Low Tire Pressure
	Airbag Readiness		Safety Belt Reminder		StabiliTrak/Traction Control Off
	Traction Control Off		BRAKE Brake System Warning		StabiliTrak/Traction Control Off
	StabiliTrak/Traction Control Warning		Parking Brake Set		Fog Lamps
			Lights On		Cruise Control

Engine Start/Stop Button♦  
Traction Control and StabiliTrak/Lane Departure Warning♦ Buttons  
Hazard Warning Flashers Button  
Trunk Release Button  
Infotainment System



Driver's Heated Seat Button♦  
Electric Parking Brake  
Climate Controls  
Passenger's Heated Seat Button♦

*Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.*

*See In Brief in your Owner Manual.*

## Remote Keyless Entry Transmitter

### Unlock

Press to unlock the driver's door.  
Press again to unlock all doors.

### Lock

Press to lock all doors. The driver's door will not lock when open if the Unlocked Door Anti Lock Out feature is turned on.

### Vehicle Locator/Panic Alarm

Press and hold briefly to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold for three seconds to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.

### Trunk


Press and hold to unlock the trunk.



### Remote Vehicle Start<sup>†</sup>

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle.

After entering the vehicle, turn the ignition to the ON position.

- During a remote start, the engine will run for 10 minutes.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

**Note:** Open Vehicle Settings in the Configuration menu to change the remote lock, unlock, and remote start settings.

*If the remote start heated seat option is selected, the heated seat button indicators do not illuminate and the temperature performance of the unoccupied heated seat may be reduced during the remote start. The heated seat turns off when the ignition is turned on.*

See Keys, Doors and Windows in your Owner Manual.

## Keyless Access System<sup>†</sup>

The Keyless Access System enables operation of the doors and ignition without removing the transmitter from a pocket or purse. The system will recognize the transmitter when it is within 3 feet of the door being opened.

### Keyless Unlocking/Locking

- ▶ With the transmitter within range of the vehicle, press the button on the driver's door handle to unlock the driver's door or all doors, depending on the selected vehicle settings. Press the button on a passenger door handle to unlock all doors.
- ▶ Press the button on a door handle and all doors will lock if the ignition is off, the transmitter is removed from the vehicle, and all doors are closed.

**Note:** Open Vehicle Settings in the Configuration menu to change the unlock and lock settings.



See Keys, Doors and Windows in your Owner Manual.

## Start

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine.

**Note:** The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in front of the center console cupholders to enable the engine to start.

## Stop

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

The audio system will be powered for 10 minutes or until the driver's door is opened. The windows and sunroof♦ will be powered for 10 minutes or until any door is opened.


## Accessory

- ▶ With the engine off, press the **ENGINE START/STOP** button once to place the ignition system in the accessory position.

See *Driving and Operating in your Owner Manual.*

## Seats

### Power Driver's Seat♦

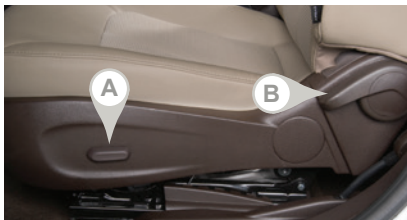

#### A. 6-way Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

#### B. Seatback Recline Adjustment

Lift the rear lever to recline or raise the seatback.

### Folding Rear Seats



1. Make sure the safety belt buckles are stowed in the seat cushion pockets and the safety belt is aligned with the belt guide (A).
2. Press the lever (B) on top of the seatback. When the red marking is visible, the seatback is unlatched.
3. Fold down the seatback.

See *Seats and Restraints in your Owner Manual.*

## Tilt/Telescopic Steering Wheel

- ▶ With the vehicle parked, push down the lever on the left side of the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See *Instruments and Controls in your Owner Manual*.

## Lighting

### Automatic Headlamp System



 **Off/On**

### **AUTO Automatic Headlamp System**

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps**

Press to turn the fog lamps and parking lamps on or off.

### Instrument Panel Lighting

 **Instrument Panel Brightness**

Rotate and hold the thumbwheel to adjust the instrument panel lighting.

See *Lighting in your Owner Manual*.

## Windshield Wipers



**HI High**

**LO Low**

 **INT Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

**OFF**


**1x Mist**

Single wipe.

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

See *Instruments and Controls in your Owner Manual*.

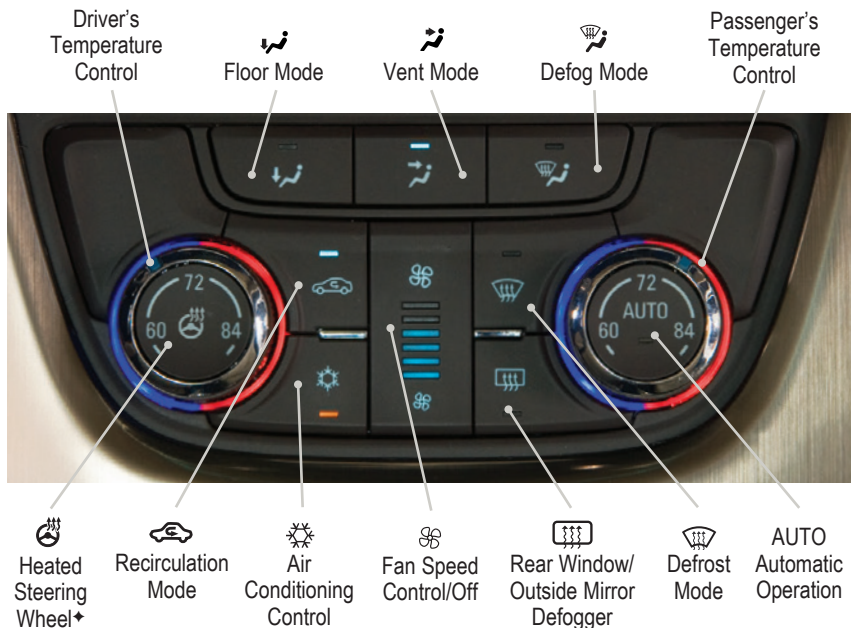


## Dual Automatic Operation

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. Allow time for the system to automatically reach the desired temperature.

If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

## Recirculation Mode

The  Recirculation Mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. It is not available while the Defrost Mode is selected. When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

See *Climate Controls in your Owner Manual*.

## Audio System

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

SRCE:  
Select  
the audio  
source

HOME:  
Main  
screen

1-6:  
Favorite  
preset  
stations

⏮  
Previous  
radio  
station,  
track or file

⏻/VOL:  
Power/  
Volume

⏭  
Next radio  
station,  
track or  
file

⏸  
Play/  
Pause

FAV:  
Display  
pages of  
favorite  
radio  
stations

AS:  
Autostore  
list of  
stations with  
strongest  
signal



📞  
Open the  
Phone  
menu/Mute  
the vehicle  
speakers

⏪BACK:  
Move back  
one level  
in the  
menus

TUNE/MENU:  
Turn the knob to  
highlight menu items;  
or tune radio stations;  
push the chrome ring to  
open/select menu items

CONFIG:  
Open the  
Configuration  
menu



INFO:  
Display  
available  
song  
information

⏏  
Eject  
disc

🕒  
Open the  
Clock  
menu



## Setting the Time

1. Turn on the audio system.
2. Press the  **Clock** button.
3. Press the **MENU** knob chrome ring to highlight the desired time.
4. Turn the **MENU** knob to change the value; press the chrome ring to confirm the set value. Press the  **BACK** button to return to the Time Settings menu.

**Note:** Open the Time and Date Settings in the Configuration menu to make other time and date adjustments.

## Storing Favorite Stations

Radio stations from all bands (AM, FM or XM<sup>†</sup>) can be stored, in any order, on up to six pages of favorites.

1. Tune in the desired radio station.
2. Press the **FAV** button to display the page where the station is to be stored.
3. Press and hold one of the six numeric pushbuttons for more than two seconds.
4. Repeat the steps for each pushbutton on each page.

## Portable Audio Devices



**Note:** Some supported devices can be recharged when connected to the USB port<sup>†</sup>.

A 3.5-mm auxiliary input jack (A) and a USB port<sup>†</sup> (B) are located in the center console. Route the device wires through the wire exit (C) of the console lid.

A portable audio device connected to the auxiliary input jack can be controlled only by using the portable device controls. To optimize speaker volume, fully increase the volume level of the portable device.

Compatible devices connected to the USB port can be controlled by the audio system. **Not all devices may be supported.** Use the **MENU** knob and the audio steering wheel controls to access various functions and to disconnect a USB device.

See *Infotainment System in your Owner Manual.*


## IntelliLink System


IntelliLink uses a Bluetooth or USB connection to link to a compatible mobile device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. IntelliLink enables streaming audio through a smartphone and hands-free voice control. For assistance with the IntelliLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or go to [www.buick.com](http://www.buick.com) and click the Owners link.

### Pair a Phone

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the IntelliLink system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit [www.gmttotalconnect.com](http://www.gmttotalconnect.com).

### Pair a Phone using Voice Recognition

1. Press the  **Push to Talk** button.
2. After the tone, say “Pair.” The system will search for your phone. A four-digit code appears on the display.
3. Start the pairing process on the phone. Locate your vehicle name or IntelliLink on the phone.
4. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
5. If your phone prompts you to accept the connection or phone book download, click “yes” and always allow.

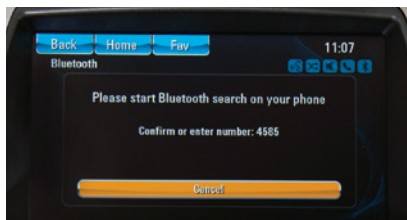


### Pair a Phone using the Screen Buttons

1. Press the **CONFIG** button.
2. Touch **Phone Settings**.
3. Touch **Bluetooth**.
4. Touch **Pair Device**. A four-digit code appears on the display.
5. Start the pairing process on the phone. Locate your vehicle name or IntelliLink on the phone.
6. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
7. If your phone prompts you to accept the connection or phone book download, click “yes” and always allow.

*See your Infotainment System Owner Manual.*

## Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the enhanced voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say "Ready," followed by a beep.
3. After the beep, say what you want it to do.

- **Phone (using your paired phone):**

- "Pair" or "Connect"
- "Dial" or "Call [number]"
- "Dial" or "Call [phone book name]"

Example command: "Call Amanda" or "Dial 555-1212"

- **Media Music Device Search:**

- "Play CD"
- "Play USB"
- "Play Bluetooth audio"

Example command: "Play artist [name]"

Example command: "Play song [name]"

- **Radio Control:**

Example command: "Tune FM 104.3" or "Tune Classic Vinyl"

Example command: "Tune Pandora" (Pandora app required)

Example command: "Thumbs up" or "Thumbs down" (Pandora app required)

 
- **Help:**

- Say "Help" for voice recognition assistance.

## Device List

To switch devices, select from the list of paired phones/devices.

### Listing all Paired Phones using Voice Recognition

1. Press the  **Push to Talk** button.
2. Say "Device list" or "Select device."

### Listing all Paired Phones using the Screen Buttons

1. Press the **CONFIG** button.
2. Touch **Phone Settings**.
3. Touch **Bluetooth**.
4. Touch **Device List**.

See your Infotainment System Owner Manual.

## IntelliLink System

**Note:** Always verify that your phone has the latest version of an application and that the phone volume is turned up.

### PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.



- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

### Stitcher™ SmartRadio

Stream favorite podcasts, radio shows and news to your vehicle.

- ▶ Download the Stitcher app to your smartphone. Restart the smartphone and sign in to Stitcher.
- ▶ Select a category to listen to.
- ▶ If you like the station, touch the **Star** screen button to add it to your favorites list.

**Note:** BlackBerry® phones are not supported for this application.

### Gracenote® Behind the Scenes

Gracenote is technology embedded in the IntelliLink system to help you better manage and navigate your music collection. With your portable audio device connected to the IntelliLink system, Gracenote identifies your music collection and displays the artist and album name and genre as well as the cover art. Gracenote also will fill in missing information.

### SiriusXM™ Satellite Radio

With SiriusXM, you have access to over 180 channels of commercial-free music, sports, talk, entertainment, comedy and weather using the radio controls or voice commands. A SiriusXM subscription is required.

- XM Travel Link includes fuel locations and prices, weather, and movies with theater locations. Additional subscription fee required.
- XM Tune Select finds your favorite artists or songs on all XM stations and alerts you.

*See your Infotainment System Owner Manual.*

## Navigation Controls

### A. NAV Navigation

Press to view the vehicle's current position on the map screen.

### B. DEST/NAV Destination/Navigation

Press to access the Destination Entry screen to plan a destination.

### C. RPT/NAV Repeat/Navigation

Press to repeat the voice guidance prompt.

To select various functions, touch the highlighted touch screen buttons in the on-screen menus or use the **TUNE/MENU** knob.

Use the 4-way control in the center of the **TUNE/MENU** knob to move in each direction on the map screen.



**Note:** When the vehicle is moving, various on-screen functions are disabled to reduce driver distraction.

## Entering a Destination

1. Press the **DEST/NAV** button.
2. Touch the **Address Entry** screen button to enter a specific address. The Destination Entry menu also lists other options to plan a route.
3. Select State/Province, City or Street and enter the information. Touch the **List** button to select the desired name from the generated list for each entry.
4. Enter the house number. Touch the **Done** screen button.
5. The entered address is displayed.
6. Select the Route Options and touch the **Start Guidance** screen button.

See your *Infotainment System Owner Manual*.

## OnStar® with 4G LTE

If equipped with OnStar 4G LTE and Wi-Fi®, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on your overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

**Note:** See [onstar.com](http://onstar.com) for a detailed instruction guide, vehicle availability, details, and system limitations.

See your *Infotainment System Owner Manual*.

## Audio Steering Wheel Controls



### Volume

Press + or – to adjust the volume.

### SRC Source

Press to select an audio source.

### Next/Previous

Rotate the thumbwheel up or down to go to the next or previous favorite radio station, track, or file.

### Push to Talk

Press to answer an incoming call or interact with the audio, Bluetooth, or OnStar® system.

### End Call/Mute

Press to end or reject a call.  
Press to mute the vehicle speakers.

*See Instruments and Controls in your Owner Manual.*

## Cruise Control



### Setting Cruise Control

1. Press the **On/Off** button. The Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, rotate the thumbwheel down to the **SET** position to set the speed. The symbol will illuminate in green on the instrument cluster.

### Adjusting Cruise Control

#### RES/+ Resume/Accelerate

Toggle the thumbwheel up to resume a set speed. When the system is active, toggle the thumbwheel up to increase speed.

#### SET/- Set/Coast

When the system is active, toggle the thumbwheel down to decrease speed.

#### Cancel


Press to cancel the cruise control but retain the set speed in memory. Pressing the brake pedal also will cancel the cruise control. Turn off cruise control or the vehicle ignition to erase the cruise control set speed.

*See Driving and Operating in your Owner Manual.*

## Driver Information Center

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

### DIC Controls

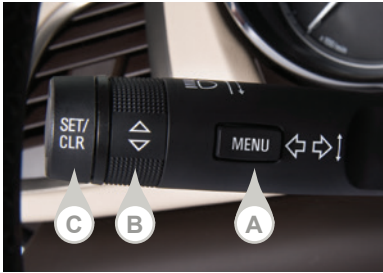

#### A. MENU

Press to display the **Vehicle Information** menu (units, tire pressure, remaining oil life, battery voltage) or the **Trip/Fuel** menu (digital speedometer, trip odometers, fuel range, average fuel economy, instantaneous fuel economy, average vehicle speed, timer, OnStar Turn-by-Turn guidance navigation).

#### B.

Rotate the band to scroll through the items of each menu.

#### C. SET/CLR

Press the button on the end of the lever to set a menu item or clear a message. Press and hold the button to reset a menu item.

*See Instruments and Controls in your Owner Manual.*

## Vehicle Personalization

Some vehicle features can be customized using the audio controls and menus. Personalization menus may include Climate and Air Quality, Comfort and Convenience, Collision/Detection Systems, Exterior Ambient Lighting, Power Door Locks, Remote Lock/Unlock/Start, and Restore Factory Settings.



### Customize Settings

1. Press the **CONFIG** button (A) to enter the Configuration menu.
2. Turn the **MENU** knob (B) to highlight Vehicle Settings; press the **MENU** knob chrome ring to select it.
3. Turn the **MENU** knob to highlight the desired menus and settings; press the **MENU** knob chrome ring to select the highlighted item.
4. Press the **BACK** button (C) to move back within a menu.

*See Instruments and Controls in your Owner Manual.*

## Automatic Transmission



### Manual Mode

Manual Mode allows the driver to shift gears manually. This feature can be used to drive the vehicle in a sportier manner, or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever left to the +/- position.
2. Tap the shift lever forward (+) to upshift or rearward (-) to downshift. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will downshift automatically.

*See Driving and Operating in your Owner Manual.*



## Traction Control and StabiliTrak® Systems

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.



### Turning Off Traction Control

Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn off traction control, press the  **Traction Control/StabiliTrak Off** button. The  Traction Control Off light will illuminate on the instrument cluster.
- ▶ Press the button again to turn on traction control.

*See Driving and Operating in your Owner Manual.*



## Ultrasonic Rear Parking Assist♦

Detected objects are indicated by audible beeps when the vehicle is in Reverse. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30 cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- ▶ To turn the system Off or On, press the **CONFIG** button to access the Configure menu and select Vehicle > Collision/Detection Systems > Park Assist.

When the system is On, a beep sounds when shifting into Reverse.

**Note:** The system may be disabled if dirt, snow or ice builds up on the sensors. Keep the vehicle clean for proper operation.

See *Driving and Operating in your Owner Manual*.

## Rear Vision Camera

### Rear Vision Camera

When the vehicle is in Reverse, a view of the area behind the vehicle appears on the infotainment screen.

- ▶ To turn the system Off or On, press the **CONFIG** button to access the Configure menu and select Display > Rear Camera Options > Camera. A checkmark indicates the system is On.


**Note:** The system may not display a clear image if dirt, snow or ice builds up on the camera lens. Clean the camera, located above the license plate, with water and a soft cloth.

### Rear Cross Traffic Alert♦

The Rear Cross Traffic Alert system warns of traffic coming from either direction — up to 65 feet (20 m) from the left or right side of the vehicle — by displaying a visual alert on the infotainment screen from the Rear Vision Camera.

See *Driving and Operating in your Owner Manual*.

## Side Blind Zone Alert♦


While driving, the Side Blind Zone Alert system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area. If the turn signal is activated when a vehicle has been detected, the warning symbol will flash.

- ▶ To turn the system Off or On, press the **CONFIG** button to access the Configure menu and select Vehicle > Collision/Detection Systems > Side Blind Zone Alert.

**Note:** The system may be disabled in heavy rainstorms or if dirt or snow builds up on the corners of the rear bumper. Keep the vehicle clean for proper operation.

See *Driving and Operating in your Owner Manual*.

## Forward Collision Alert<sup>†</sup>

When the green  symbol is displayed on the instrument cluster, the system is tracking the vehicle ahead. When approaching a vehicle directly ahead too quickly, a visual alert is displayed on the Driver Information Center and audible beeps sound.

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to select a follow gap setting of Far, Medium, Near, or Off.

*See Driving and Operating in your Owner Manual.*

## Lane Departure Warning<sup>†</sup>


When crossing a detected lane marking without using a turn signal, a  visual alert is displayed on the instrument panel and audible beeps sound.

- ▶ To turn the system Off or On, press the  **Lane Departure Warning** button on the upper center of the instrument panel.

**Note:** The system operates only at speeds greater than 35 mph. The visual alert and display turn off at speeds below 35 mph.

*See Driving and Operating in your Owner Manual.*

## Tire Pressure Monitor

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

*Refer to your Owner Manual for additional information about normal monthly tire maintenance.*

*See Vehicle Care in your Owner Manual.*

## Engine Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center (DIC) when it's necessary to change the engine oil and filter. The system should be reset to 100% only following an oil change.

*See Vehicle Care in your Owner Manual.*

## Electric Parking Brake




- ▶ To apply the parking brake, pull up the **(P) Parking Brake** switch by the shift lever. The Brake and Parking Brake warning lamps on the instrument cluster illuminate when the parking brake is applied.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal and press down the **(P) Parking Brake** switch.

**Note:** The parking brake will automatically release if the vehicle is running, placed into gear, and an attempt is made to drive away.

See *Driving and Operating in your Owner Manual*.

## Door Locks

- ▶ Pull the inside door handle of a locked door to unlock it; pull the inside handle again to open the door.
- ▶ To prevent a rear door from opening from the inside, use the key to turn the  safety lock, located on the inside edge of the rear doors, to the horizontal position.

See *Keys, Doors and Windows in your Owner Manual*.

## Sunroof<sup>†</sup>

The sunroof controls are located on the overhead console.

### Express Open/ Close

- ▶ Fully press the rear of the switch to express open the sunroof. Gently press and hold the switch to partially open the sunroof.
- ▶ Fully press the front of the switch to express close the sunroof. Gently press and hold the switch to partially close the sunroof.

### Tilt/ Close

- ▶ Press the rear of the switch to tilt the sunroof.
- ▶ Press the front of the switch to close the sunroof.

See *Keys, Doors and Windows in your Owner Manual*.

## Roadside Assistance

**1-800-252-1112**

**TTY Users: 1-888-889-2438**

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for 6 years/70,000 miles, whichever occurs first, at no expense to you. This value-added service is intended to provide you with peace of mind as you drive across town or travel the open road.

Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer.

### Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

## myBuick and OnStar® Mobile Apps



The myBuick and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



Visit [onstar.com](http://onstar.com) for more information. Download the mobile apps from your compatible device's app store.

To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit [onstar.com](http://onstar.com).

## Buick Owner Center

The Buick Owner Center, a complimentary service for Buick owners, is a one-stop resource designed to enhance your Buick ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at [my.buick.com](http://my.buick.com).

### We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2014 General Motors. All rights reserved.



23106407 A